

Please review all precautions listed at the end of this document.

Please note it is recommended to have new batteries in your handheld garage door transmitter prior to programming and pull your vehicle complete outside of the garage because the door will activate during programming

1. For first time training, press and hold the two outer HomeLink® buttons, releasing only when the HomeLink® indicator light begins to flash after 20 seconds. (Do not perform this step when training the additional HomeLink® buttons.)
2. Hold both the handheld transmitter button and the HomeLink® button you would like to program until the HomeLink® flashes slowly then rapidly (then release both buttons)
3. Press and hold the HomeLink® button you just programmed. If the garage door opens/closes then programming is complete. If it does not then proceed to step 4.
4. Get a ladder and press and release the "learn" button on the back of your garage door motor head
5. Within 30 seconds get back into your vehicle and press and release the HomeLink® button you just programmed up to 3 times or until your garage door activates. Programming is complete.

If you need further assistance, please call HomeLink® Customer care at 1-800- 355-3515.

CAUTION!

Before programming HomeLink® to a garage door opener or gate operator, make sure that people and objects are out of the way of the device to prevent potential harm or damage. Your motorized garage door or gate will open and close while you are programming HomeLink®. Do not program HomeLink® if people or pets are in the path of the door or gate. A moving garage door or gate can cause serious injury or death to people and pets or damage to objects.



Vehicle exhaust contains carbon monoxide, a dangerous gas. Do not run the vehicle's engine while programming HomeLink®. Exhaust gas can cause serious injury or death. When programming a garage door opener, it is advised to park outside of the garage.

Do not use HomeLink® with any garage door opener that lacks safety stop and reverse features as required by U.S. federal safety standards (this includes any garage door opener model manufactured before April 1, 1982). A garage door that cannot detect an object signaling the door to stop and reverse - does not meet current U.S. federal safety standards.

If programming a garage door opener or gate, it is advised to unplug the device during the HomeLink® programming and also if performing the "cycling" process to prevent possible motor burn-up.

NOTE: Some vehicles may require the ignition to be turned on or to the second (or "accessory" or ACC) position for training and/or operation of HomeLink®. It is also recommended that a new battery be replaced in the hand held transmitter of the device being trained to HomeLink® for quicker training and accurate transmission of the radio frequency.

Retain the original hand-held transmitter of the RF device you are programming for use in other vehicles, as well as for future HomeLink® programming. It is also suggested that upon the sale of the vehicle, the programmed HomeLink® buttons be erased for security purposes. To erase the programmed buttons, perform the procedure shown in step number 1.

**To train additional HomeLink® buttons, begin with step two.



Indicates that this instruction is important to follow for reasons of personal safety, and that failure to follow the instruction could result in bodily injury.



HomeLink® is intended to be used only with HomeLink® compatible products that are programmed consistent with the applicable instructions on our website at www.HomeLink.com. Those instructions and product listings indicated by the  symbol are particularly important for avoiding damage to the programmed device and other property associated with that device. Failure to comply with  instructions or  product listings can result in unwanted property damage. Johnson Controls is not responsible for property damage that results from failure to follow instructions or product listings indicated by the .